




CAUTION

- Install in a dry sheltered position.
- Luminaire is not sealed. Do not install where water or high humidity may be present without further protection.
- Installation should only be performed by a qualified professional.
- Install in accordance with all appropriate wiring standards.
- DALI is not SELV and needs to be wired accordingly.
- Never connect a LED luminaire to a driver that is powered. Doing so may result in damage to the LED.
- Always make sure the output voltage range and output current of the LED driver match the requirements of the LED luminaire. Failure to do so may result in damage to both the driver and the luminaire.
- The light source contained in this luminaire shall only be replaced by the manufacturer, specified service agent or a similar qualified person.
- Do not install under mechanical stress.
- Allow for expansion due to changes in temperature.
- Please be aware that while the system has a very long operational life, faults may occur, and provision needs to be made for maintenance.
- Always turn off power before working on luminaire.


Overview

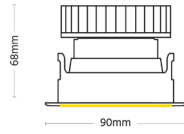

ENV0700 / ENV1000

Dimensions	90mm x 68mm
Weight	220g
Hole Cut Out	80mm


*Refer to page 3-4 for installation and wiring diagram.

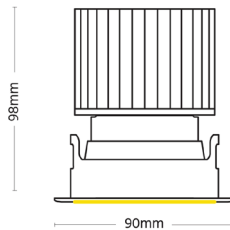

ENV1300 / ENV1800

Dimensions	90mm x 98mm
Weight	330g
Hole Cut Out	80mm

*Refer to page 3-4 for installation and wiring diagram.

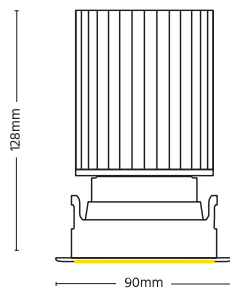


ENV2500

Dimensions	90mm x 128mm
Weight	420g
Hole Cut Out	80mm

*Refer to page 3-4 for installation and wiring diagram.

Installation - Recessed

Clearance Information

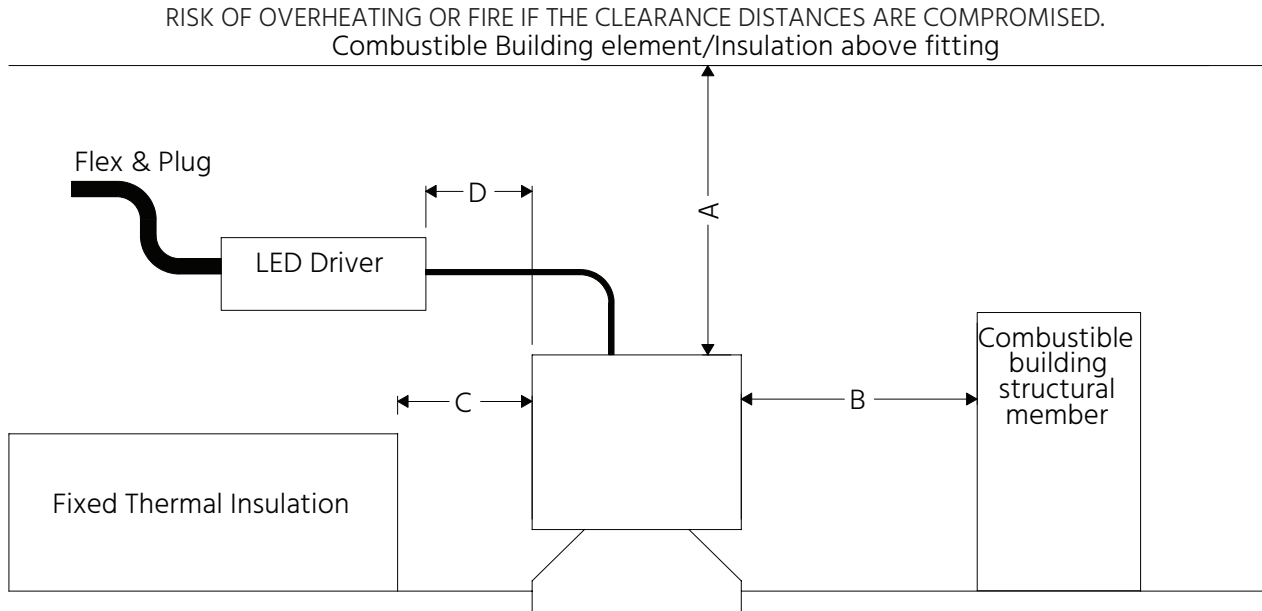

Note: Drivers should not be covered. Drivers rely on convection air flow for cooling and covering them may cause them to enter thermal regulation.

Envoy - Fixed White


Lumen Group		700	1000	1300	1800	2500*
Luminaire Power		5.9W	8.7W	11.9W	17.5W	25.2W
Connected Load		6.6W	9.7W	13.3W	19.5W	28W
A	Minimum distance from the top of the luminaire to any normally flammable building element or insulation	0mm	100mm	100mm	100mm	100mm
B	Minimum distance from the side of the luminaire to any normally flammable building element	0mm	0mm	0mm	20mm	20mm
C	Minimum distance from the side of the luminaire to any building insulation	0mm	0mm	0mm	20mm	20mm
D	Minimum distance from the side of the luminaire to drive gear	40mm	40mm	40mm	40mm	40mm

***WARNING** - This luminaire (2500lm) is not suitable for installation where thermal insulation is present, or may reasonably be expected to be installed in the future, or where there is a likelihood of other combustible material, e.g. leaves or vermin debris, etc. collecting around the luminaire. It is not suitable for domestic installations or installation in residential areas of non-domestic installations (residential institutions, hotels, boarding houses, hospitals, accommodation houses, motels and the like).


Recessed - Installation Continued

Wiring Diagram - Connectors


NOTE: Refer to specific driver instructions for power and communication connections.

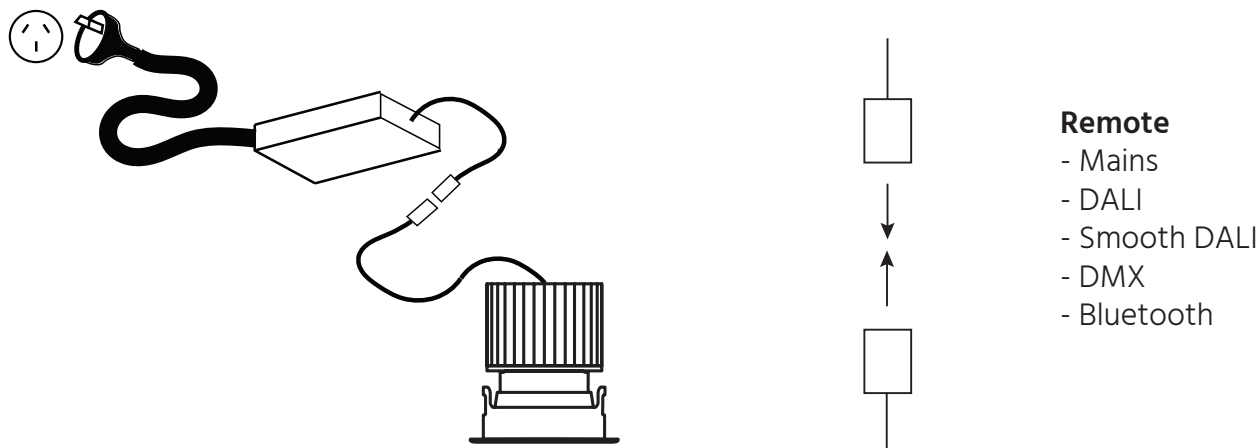


Installation Process

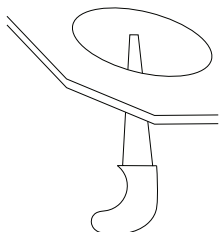


1. Cut a hole in the ceiling - 80mm.

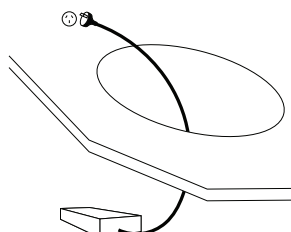


2. With mains circuit off, connect driver to mains. Do not power up. Refer to wiring diagram.

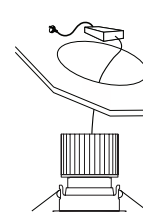


3. Connect lead from driver to luminaire and place driver in the ceiling. Power can now be turned on to test the luminaire if desired.

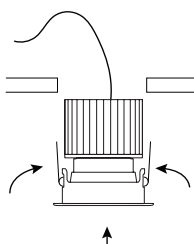

4. Squeeze the support springs against the body and feed the luminaire through the hole.

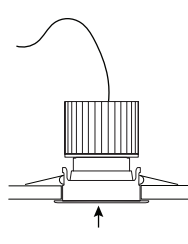

5. Gently release the spring clips and allow them to pull the luminaire into place. If necessary gently push the unit upwards to assist.

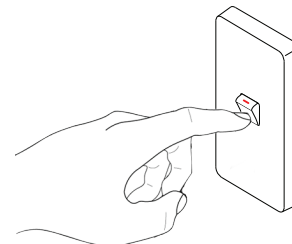

9. Turn on power.

Note: Drivers should not be covered. Drivers rely on convection air flow for cooling and covering them may cause them to enter thermal regulation.

For technical information or support, call us on +617 3899 1267 or refer to www.digilin.com.au.